


MODEL 1272



* NOTE: TYPICALLY SHOWS BOLT-NUT-WASHER SETS AS 1 ONLY
NUMBER OF SETS NEEDED VARIES ACCORDING TO LOCATION ON GUARD

1242 SAFETY GUARD COMPLETE

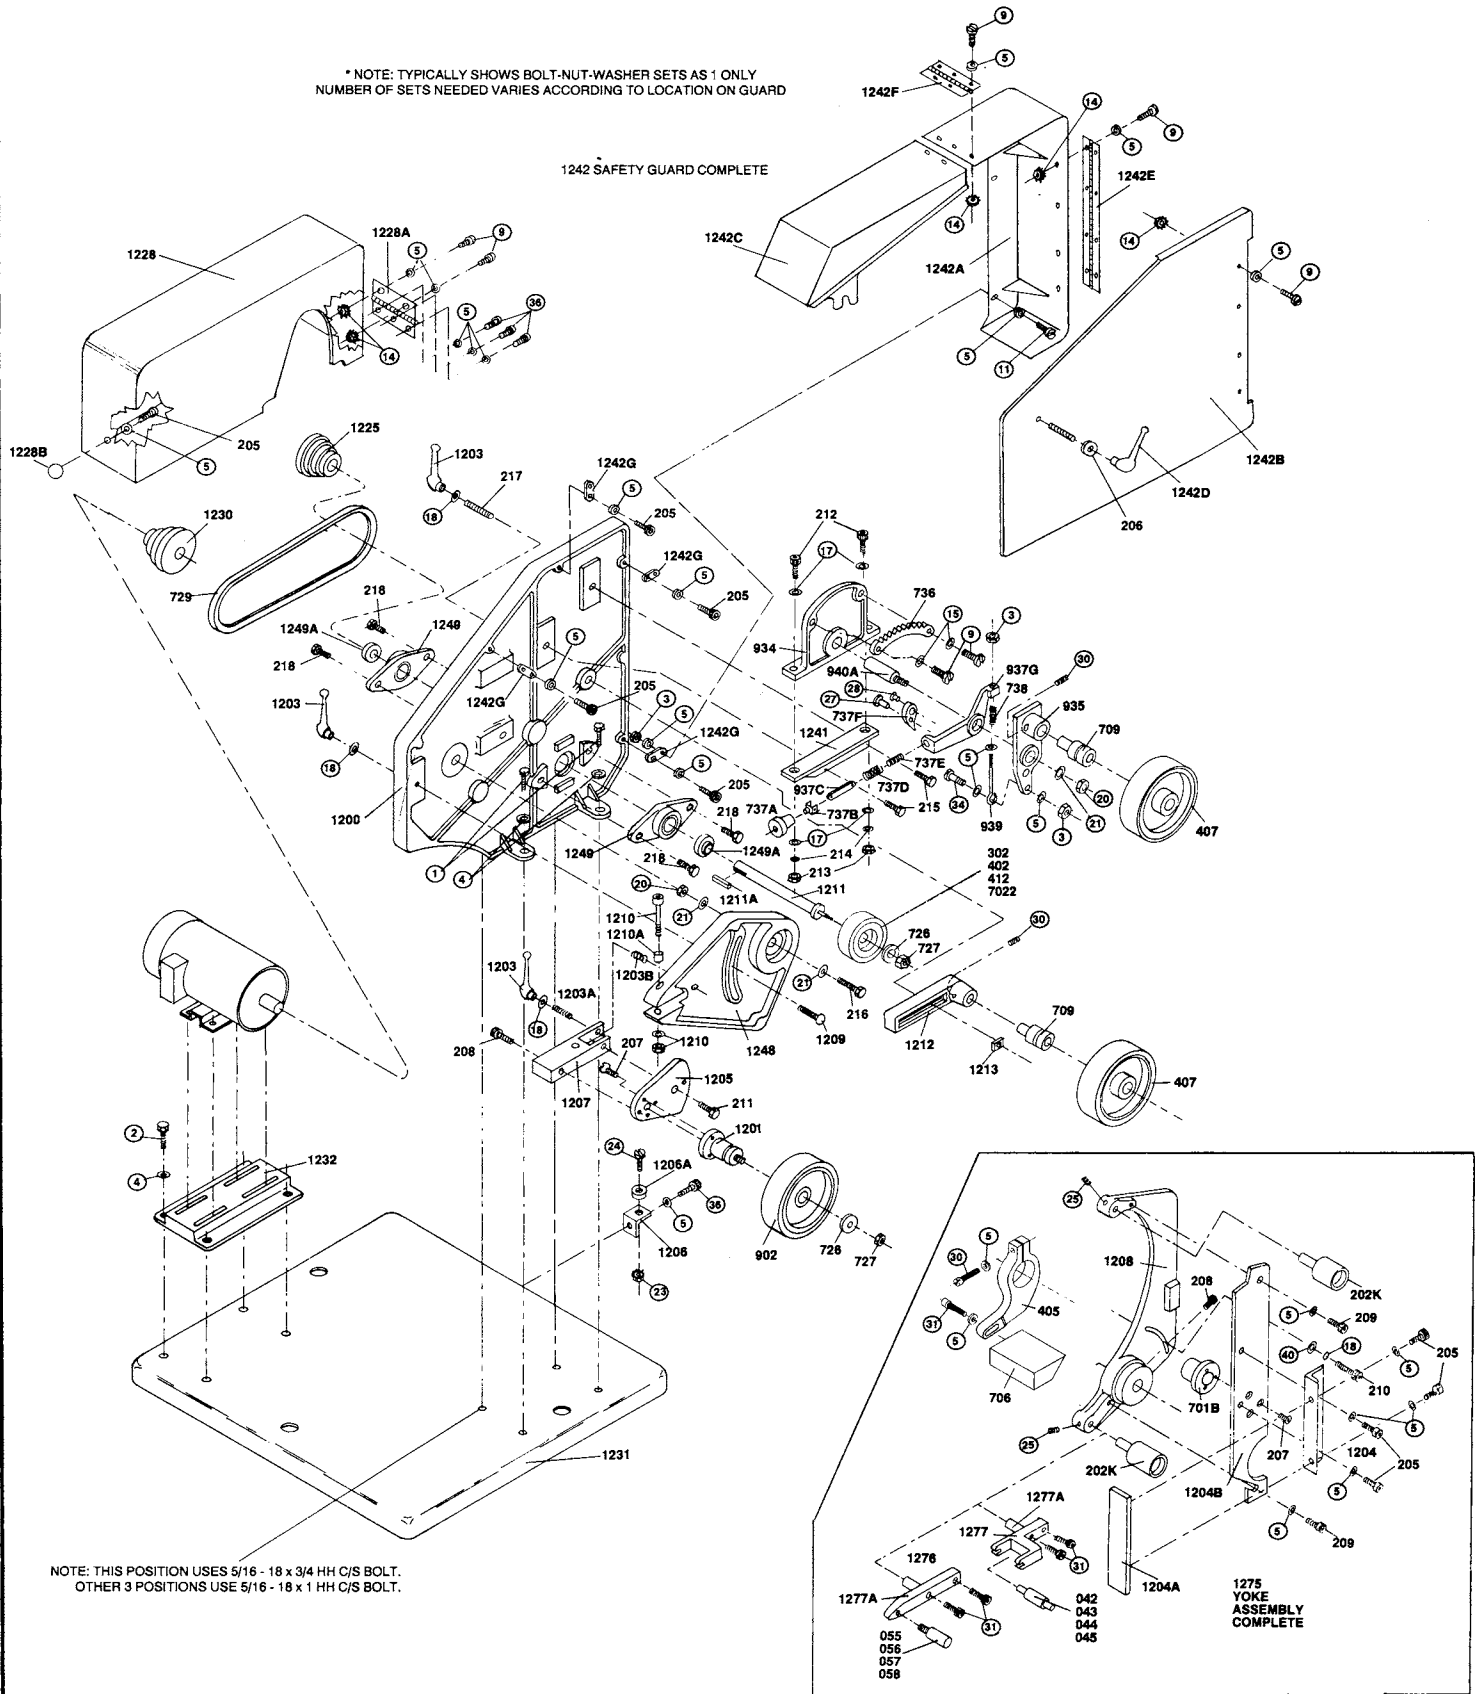

NOTE: THIS POSITION USES 5/16 - 18 x 3/4 HH C/S BOLT.
OTHER 3 POSITIONS USE 5/16 - 18 x 1 HH C/S BOLT.

1275 YOKE ASSEMBLY COMPLETE

MODEL 1272

PART #	DESCRIPTION	QUANTITY
1	5/16 - 18 x 1 HH C/S BOLT	3
2	5/16 - 18 x 1/2 HH C/S BOLT	4
3	1/4 - 20 JAM NUT	5
4	5/16 USA WASHER	8
5	.265 .500 .063 AN960-416 WASHER	39
9	10/24 x 1/2 FILL HD M/S	17
11	1/4 - 20 x 3/4 FILL HD M/S	3
14	10/24 KEPNUT	15
15	#10 L/W	2
17	.390 .625 .063 AN960-616 WASHER	4
18	.328 .562 .063 AN960-516 WASHER	4
20	1/2 - 20 ESNA NUT 21NTE080	2
21	1/2 WASHER	3
23	6 - 32 CAP NUT	1
24	6 - 32 x 3/8 PAN HEAD M/S	1
25	5/16 - 18 x 3/8 SOC SET SCREW	2
27	8 x 5/8 DRIVE SCREW	1
28	0 x 1/4 DRIVE SCREW	1
30	1/4 - 20 x 1 SOC CAP SCREW	2
31	1/4 - 20 x 1 1/14 SOC CAP SCREW	4
34	1/4 - 20 x 1 FLAT HD M/S	1
36	10 - 24 x 5/8 SOC CAP SCREW	4
40	3/8 WASHER	1
205	1/4 - 20 x 1/2 SOC CAP SCREW	9
206	FENDER WASHER	1
207	1/4 - 20 x 3/4 ALLEN FLAT HD CAP SCREW	6
208	5/16 - 18 x 1 1/4 SOC HD CAP SCREW	2
209	1/4 - 20 x 3/4 SOC HD CAP SCREW	2
210	5/16 - 18 x 2 SOC HD CAP SCREW	1
211	5/16 - 18 x 3/4 SOC HD CAP SCREW	1
212	3/8 - 16 x 1 1/4 HH C/S	2
213	3/8 - 16 HEX NUT	2
214	3/8 INTERNAL L/W	2
215	5/16 - 18 x 3/4 SOC HD CAP SCREW	2
216	1/2 - 20 x 2 1/4 HH C/S BOLT	1
217	STUD 5/8 - 18 x 2 3/4	1
218	5/16 - 18 x 1 1/4 SOL HD CAP SCREW	4
042	2" WIDE 9/16 CONTACT WHEEL	
043	2" WIDE 3/4 CONTACT WHEEL	
044	2" WIDE 1" CONTACT WHEEL	
045	2" WIDE 1 1/2 CONTACT WHEEL	
055	1" WIDE 9/16 CONTACT WHEEL	
056	1" WIDE 3/4 CONTACT WHEEL	
057	1" WIDE 1" CONTACT WHEEL	
058	1" WIDE 1 1/2 CONTACT WHEEL	
202K	2" x 2" CONTACT WHEEL WITH BEARING	
302	DRIVE WHEEL	
402	DRIVE WHEEL	
405	WORKREST SUPPORT ARM	
407	REAR IDLER WHEEL	
412	DRIVE WHEEL	
701B	HOUSING ONLY	
706	WORKREST	
709	IDLER BEARING	
726	OUTER WHEEL FLANGE	
727	CONTACT WHEEL NUT	

PART #	DESCRIPTION
729	V-BELT
737A	KNOB
737B	RED BUTTON
737D	SPRING
737E	PIPE NIPPLE
737F	PAWL
738	REAR QUICK CHANGE SPRING
902	8" CONTACT WHEEL
934	IDLER SUPPORT
935	REAR BEARING SUPPORT
937C	REAR WHEEL HANDLE STRIP
937G	HANDLE CASTING
939	SPRING GUIDE
940A	STUD
1200	MAIN FRAME
1201	CONTACT WHEEL BEARING ASSEMBLY
1203	HANDLE
1203A	STUD
1203B	SPRING
1204	ANGLE BRACKET
1204A	PLATEN 2" x 8"
1204B	SIDE MOUNTING BRACKET
1205	TRACKING PLATE
1206	STOP BRACKET
1206A	STOP BRACKET GROMMET
1207	TRACKING BLOCK
1208	YOKE CASTING
1209	ROUND/H BOLT
1210	ALLEN BOLT/WASH/NUT TRACKING BOLT
1210A	BUSHING
1211	DRIVE WHEEL SHAFT
1211A	DRIVE SHAFT KEY
1212	REAR WHEEL SLIDE
1213	LOCKING SLIDE NUT
1225	REAR PULLEY 4-STEP
1228	V-BELT GUARD
1228A	HINGE
1228B	KNOB
1230	MOTOR PULLEY 4-STEP
1231	BASE
1232	MOTOR MOUNT
1241	ANGLE PLATE FOR QUICK CHANGE ASSEMBLY
1242	SAFETY GUARD COMPLETE
1242A	GUARD MAIN
1242B	DOOR
1242C	COVER
1242D	HANDLE AND STUD
1242E	REAR HINGE FOR MAIN GUARD
1242F	TOP HINGE
1242G	MOUNTING TAB
1248	NOSE CASTING
1249	BEARING HOUSING
1249A	BALL BEARING
1275	YOKE ASSEMBLY COMPLETE
1276	1" ARM FOR 1272
1277	2" ARM FOR 1272
1277A	STUD FOR 1276 AND 1277 ARMS
7022	DRIVE WHEEL

NOTE SEE ACCESSORY SHEET FOR CONTACT WHEELS