



SECTION II – Electrical Diagrams



FOR MODELS

V-16

V-24

VH-24

V-40

VH-40

MODEL: _____

SERIAL NUMBER: _____

DATE PURCHASED: _____


DAKE Division of JSJ
724 Robbins Road
Grand Haven, Michigan 49417
616.842.7110 Phone 800-937-3253
616.842.0859 Fax 800-846-3253
Web: www.dakecorp.com
E-mail : customerservice@dakecorp.com
technicalsupport@dakecorp.com




**If machine is to be operated
At 440 volt 3 phase power,
please read the following
warning.**

WARNING!


This machine must be wired by a qualified electrician. Do not connect 440-volt power directly to this machine. The use of the stop down transformer supplied with this machine must be used. Failure to do so may affect warranty, if damage occurs from improper wiring.

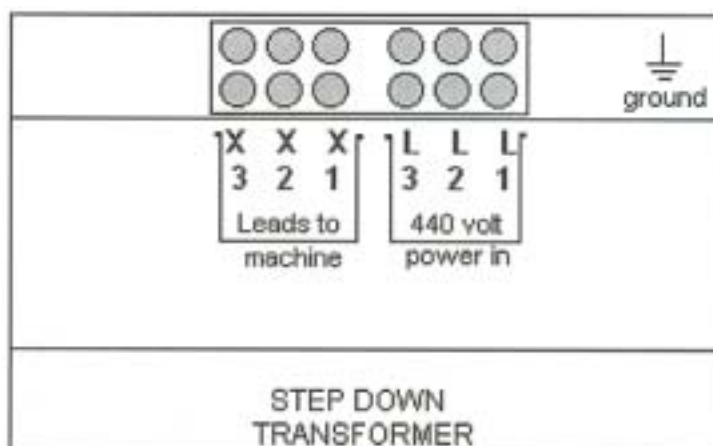


Model V-16 : Drawing 85380S1

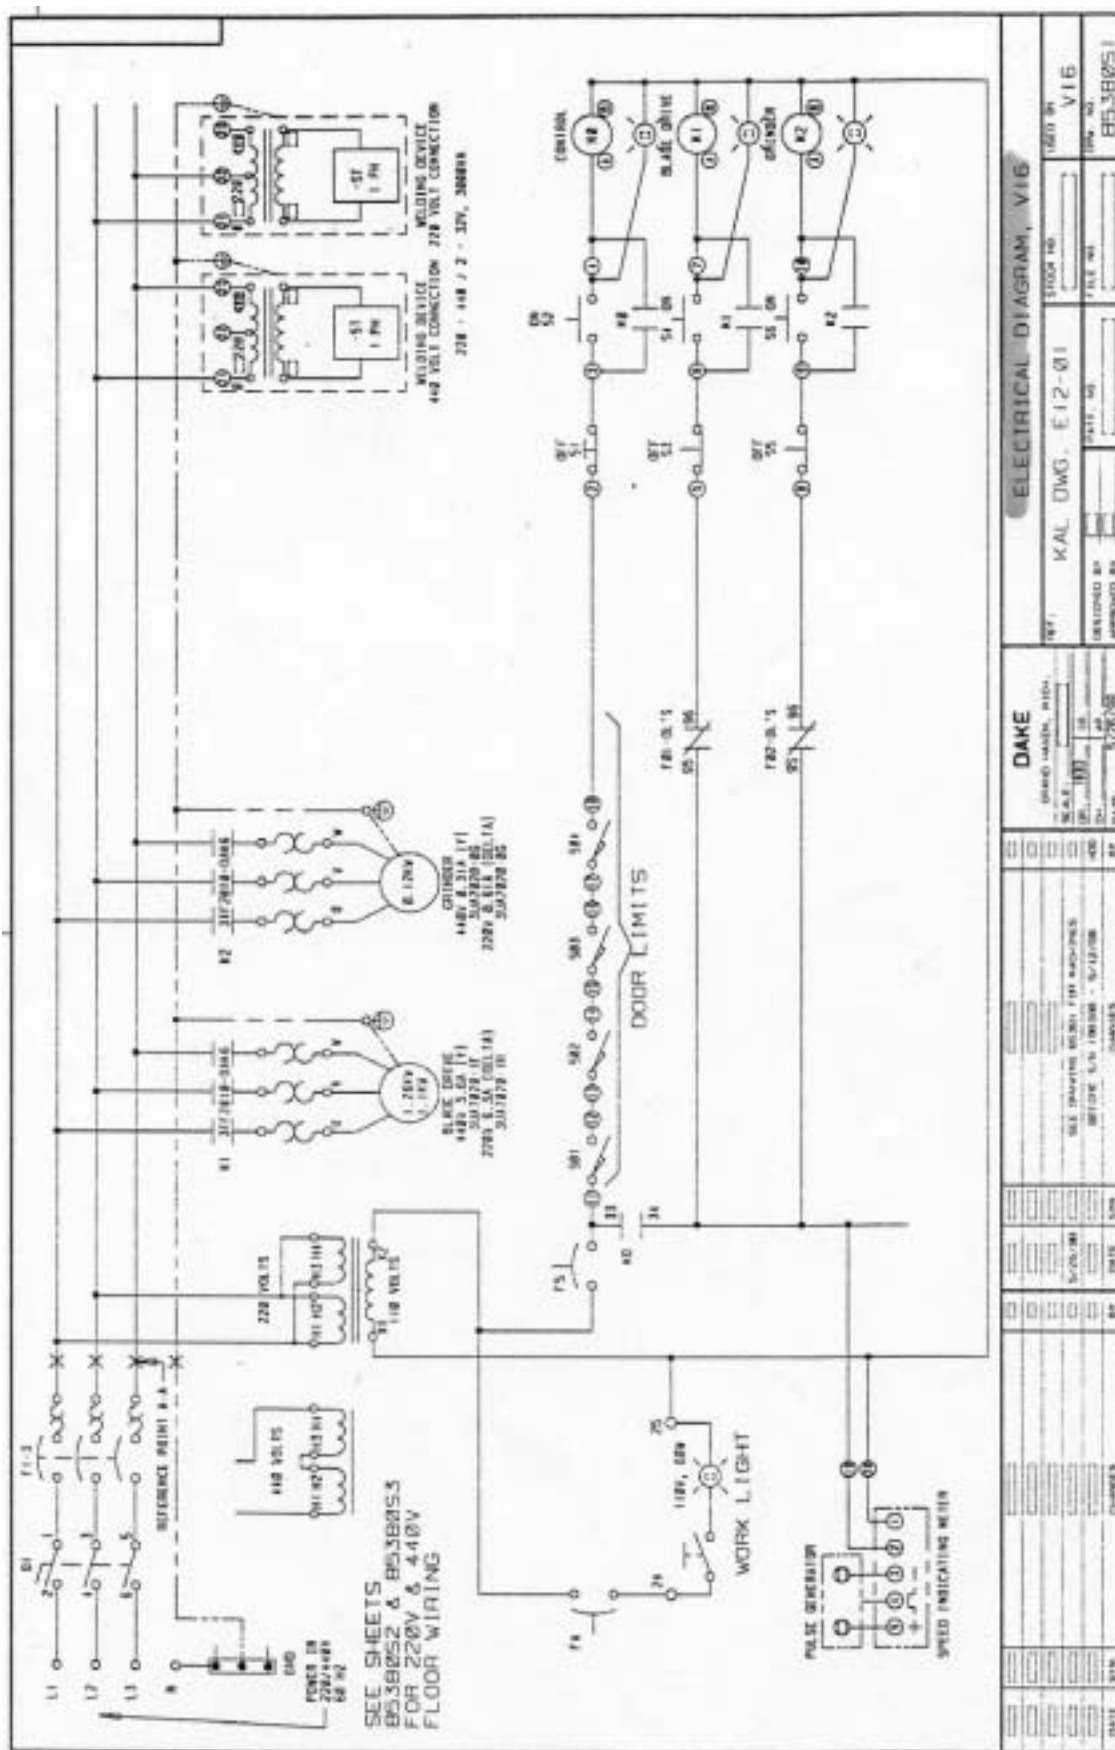


Model V-16 : Drawing 85380S2

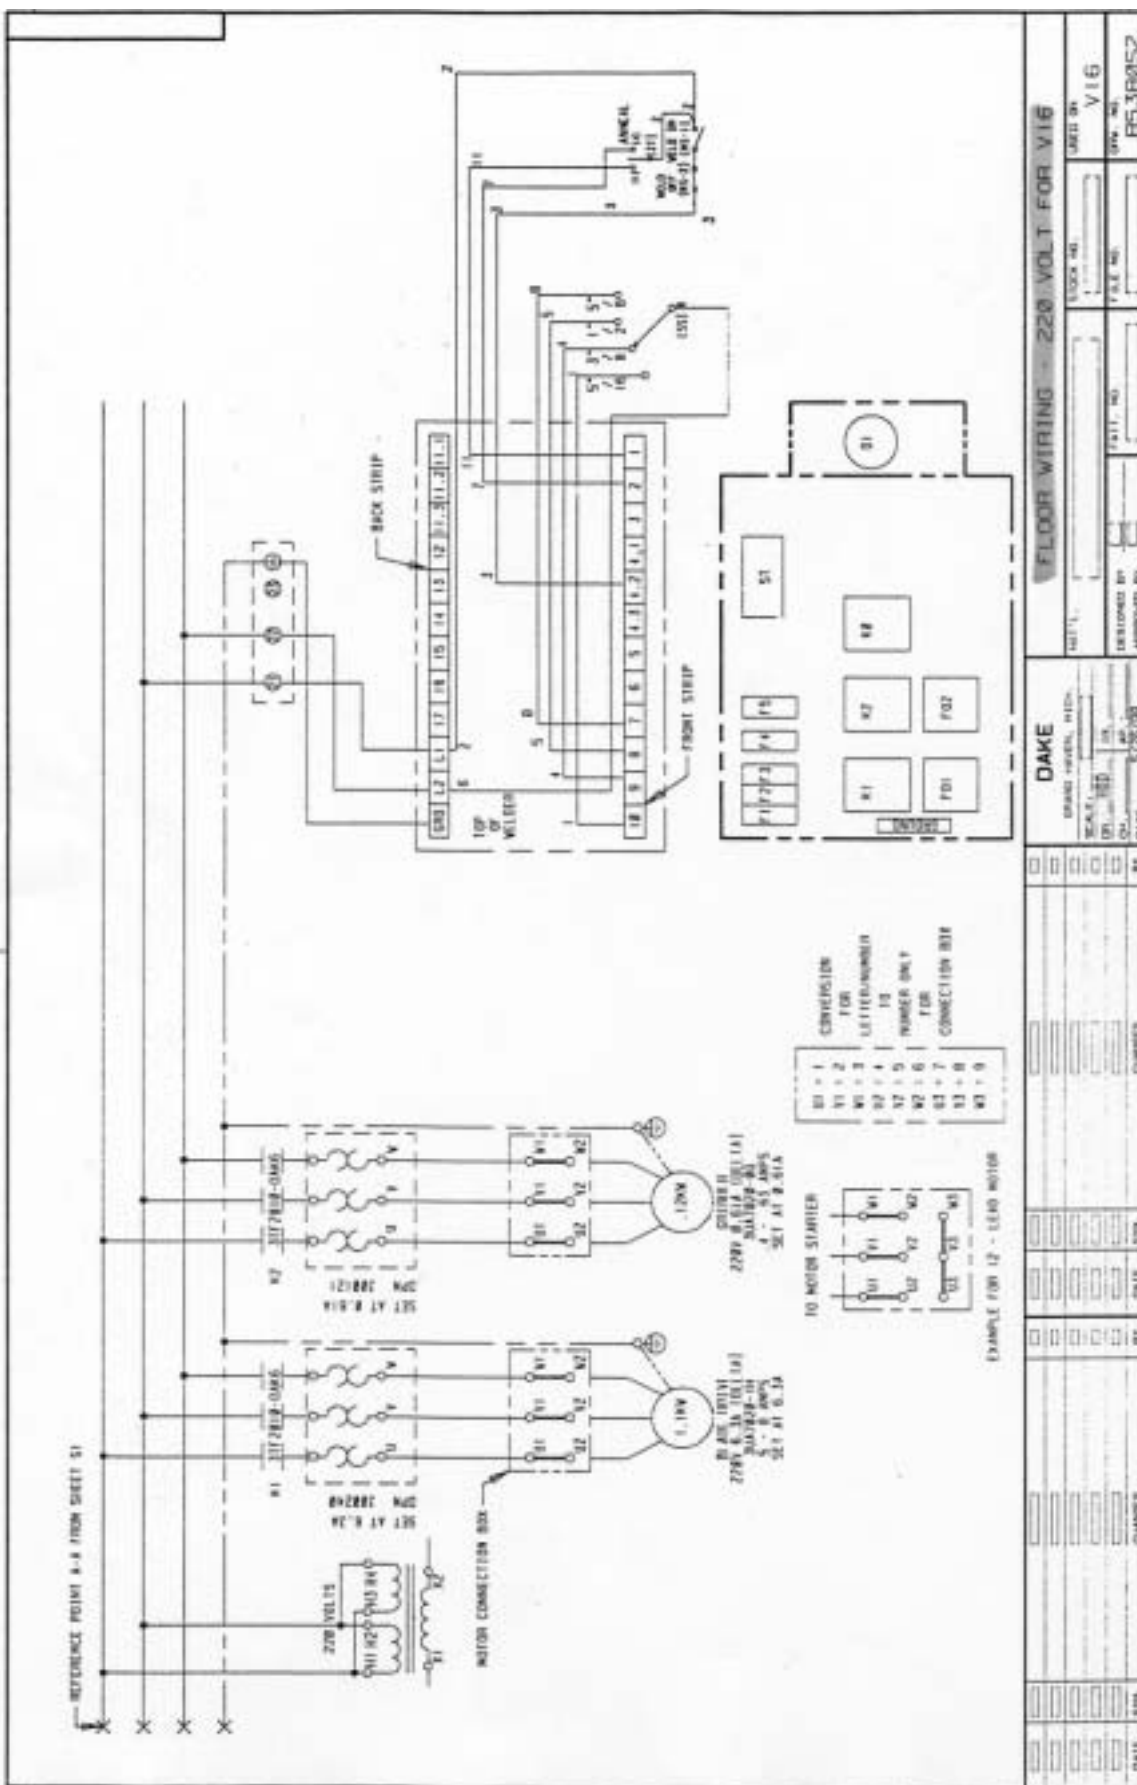

Model V-16 : Drawing 85380S3

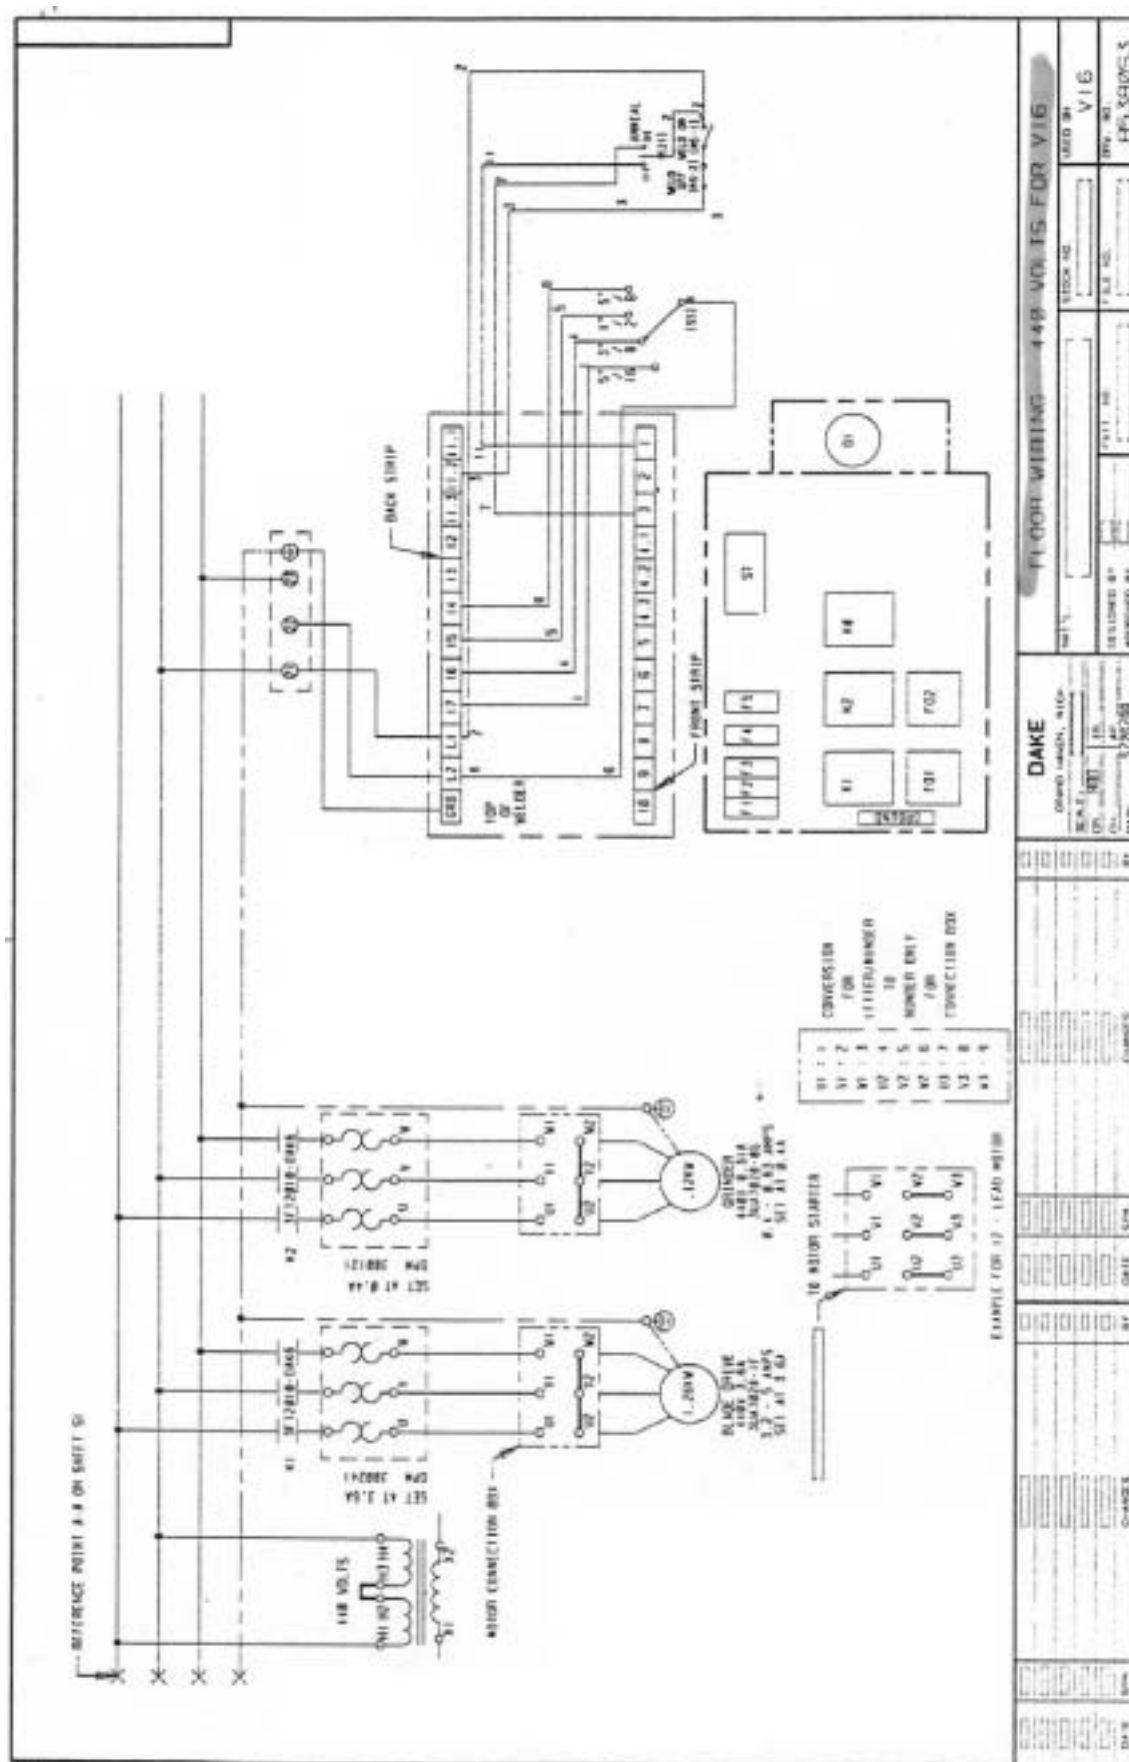


Model V-24 & V-40 : Drawing 86557S1

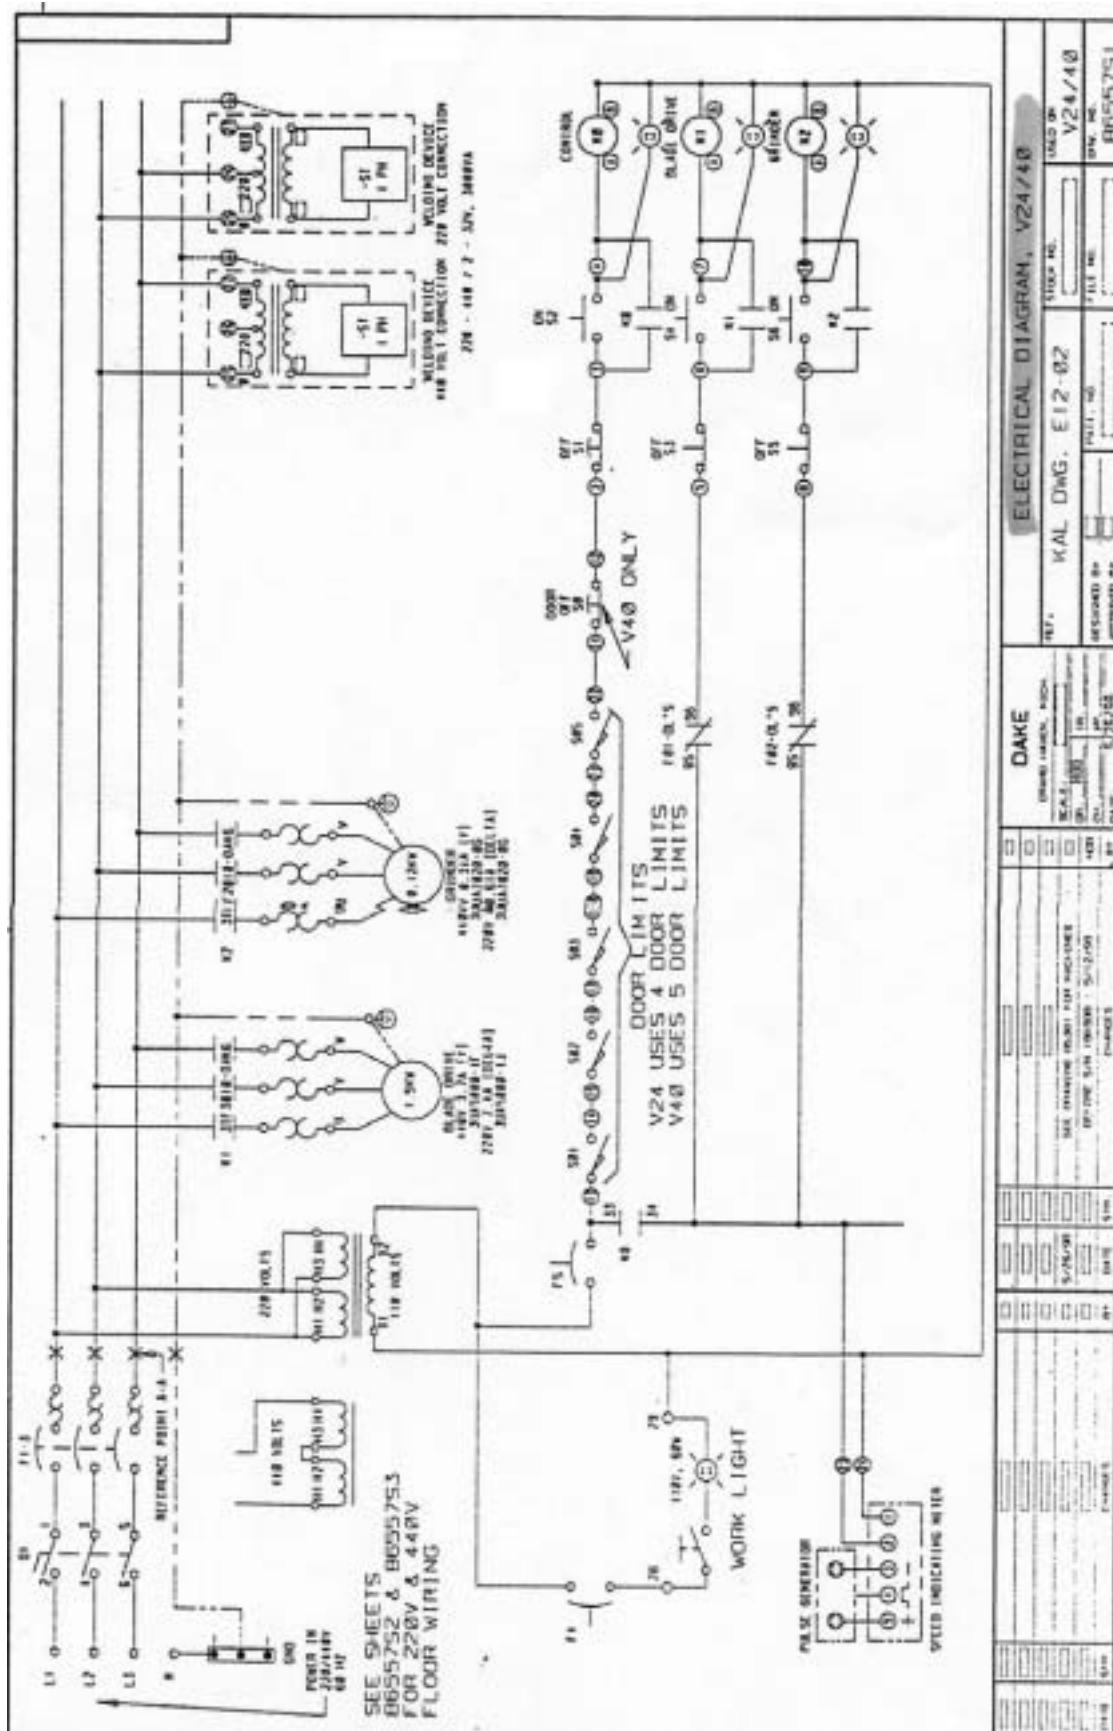




Model V-24 & V-40 : Drawing 86557S3

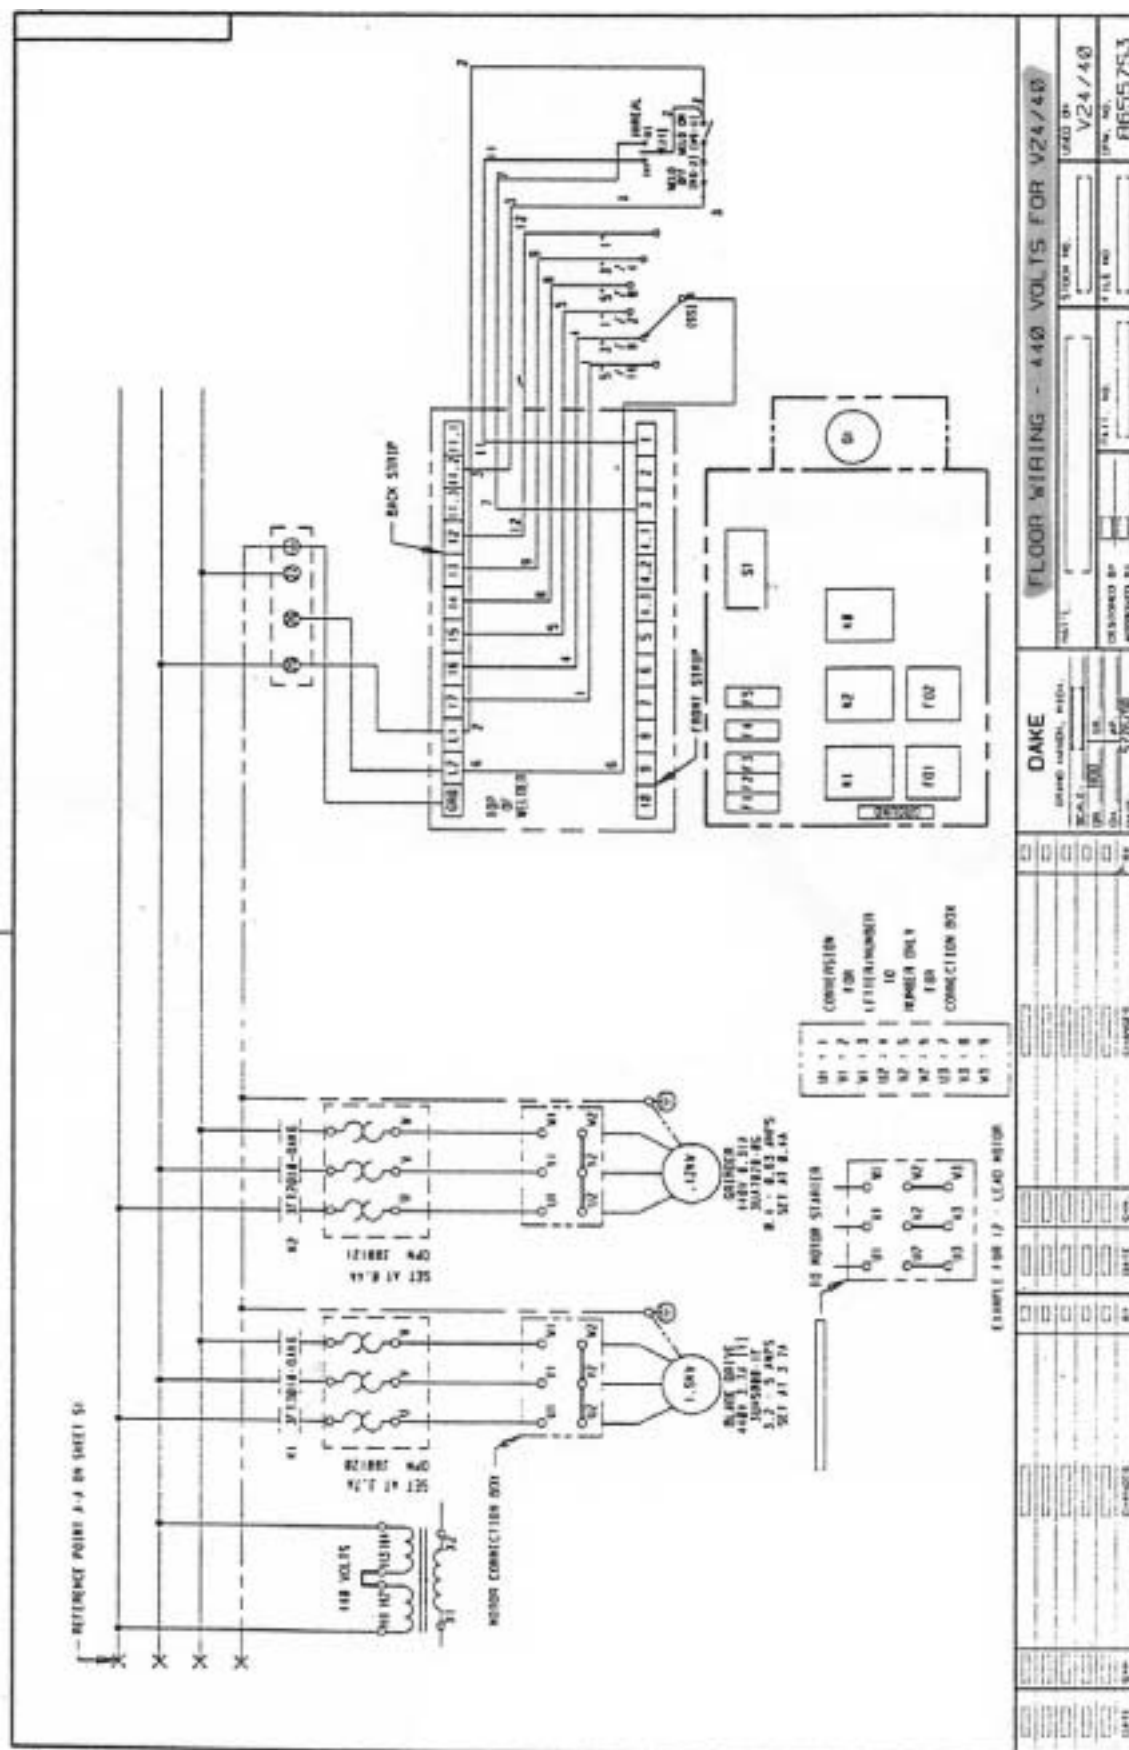

Model VH-24 & VH-40 : Drawing VH40S1

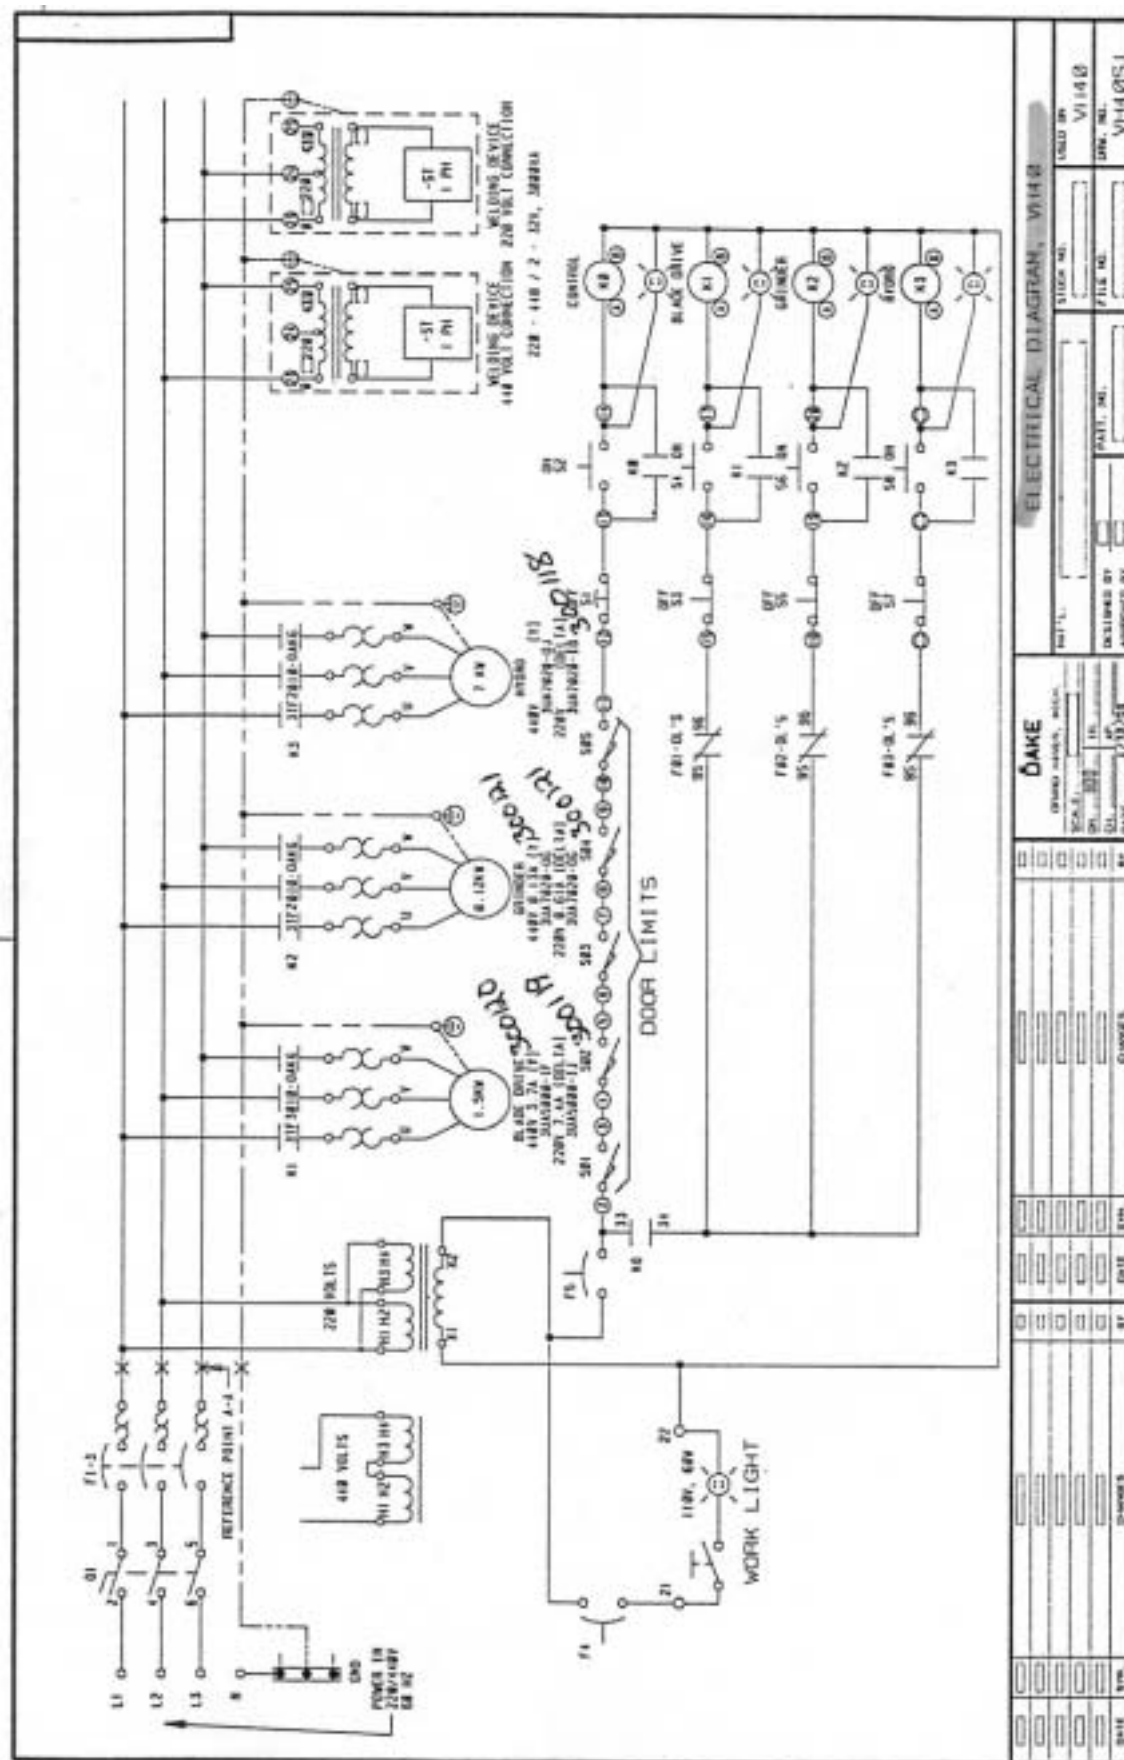

Model V-24 & VH-40 : Drawing VH40S2

