



10062.0001 Drill Press

Owner's Manual



SAFETY INSTRUCTION READ BEFORE OPERATION

To help ensure safe operation, please take a moment to learn the machine's applications and limitations, as well as potential hazards. Oliver Machinery disclaims any real or implied warranty and holds itself harmless for any injury that may result from the improper use of its equipment.

1. Do not operate the drill press when tired, distracted, or under the effects of drugs, alcohol or any medication that impairs reflexes or alertness.
2. The working area should be well lit, clean and free of debris.
3. Keep children and visitors at a safe distance when the drill press is in operation; do not permit them to operate the drill press.
4. Childproof and tamper proof your shop and all-machinery with locks, master electrical switches and switch keys, to prevent unauthorized or unsupervised use.
5. Stay alert! Give your work your undivided attention. Even a momentary distraction can lead to serious injury.
6. Fine particulate dust is a carcinogen that can be hazardous to health. Work in a well-ventilated area and whenever possible use a dust collector and wear eye, ear and respiratory protection devices.
7. Do not wear loose clothing, gloves, bracelets, necklaces or other jewelry while the drill press is in operation.
8. Be sure that adjusting wrenches, tools, drinks and other clutter are removed from the machine and/or the table surface before operating.
9. Keep hands well away from the drill bit and all moving parts. Use a hold-down or clamp to secure the stock, and use a brush, not hands, to clear away chips and dust.
10. Be sure that the drill bit is securely installed in the chuck before operation.
11. Be sure the drill bit has gained full operating speed before beginning to drill.
12. Always use a clean, properly sharpened bit. Dirty or dull bits are unsafe and can lead to accidents.
13. Use suitable work piece support if the work piece does not have a flat surface.
14. Do not push or force the bit into the stock. The drill will perform better and more safely when working at the rate feed for which it was designed.

SAFETY INSTRUCTION CONTINUED

15. Avoid working from awkward or off-balance positions. Do not overreach and keep both feet on floor.
16. Keep guards in place and in working order. If a guard must be removed for maintenance or cleaning be sure it is properly re-attached before using the tool again.
17. Never leave the machine unattended while it is running or with the power on.
18. Use of parts and accessories NOT recommended by Oliver Machinery may result in equipment malfunction or risk of injury.
19. Never stand on machinery. Serious injury could result if the tool is tipped over or if the drill bit is unintentionally contacted.
20. Always disconnect the tool from the power source before servicing or changing accessories such as bits, or before performing any maintenance, cleaning, or if the machine will be left unattended.
21. Make sure that the switch is in the "OFF" position before plugging in the power cord.
22. Make sure the tool is properly grounded. If equipped with a 3-prong plug, it should be used with a three-pole receptacle. Never remove the third prong.
23. Do not use this drill press for other than its intended use. If used for other purposes, Oliver Machinery disclaims any real implied warranty and holds itself harmless for any injury, which may result from that use.

Prop 65 Notice:

WARNING: Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Some examples of these chemicals are:

- lead from lead-based paints,
- crystalline silica from bricks and cement and other masonry products, and
- arsenic and chromium from chemically treated lumber.

Your risk from exposure to these chemicals varies, depending on how often you do this type of work. To reduce your exposure, work in a well-ventilated area and with approved safety equipment, such as dust masks that are specially designed to filter out microscopic particles. For more information go to www.P65Warnings.ca.gov.

ELECTRICAL RERQUIREMENTS

BEFORE CONNECTING THE MACHINE TO THE POWER SOURCE, VERIFY THAT THE VOLTAGE OF YOUR POWER SUPPLY CORRESPONDS WITH THE VOLTAGE SPECIFIED ON THE MOTOR I.D. NAMEPLATE.

A POWER SOURCE WITH GREATER VOLTAGE THAN NEEDED CAN RESULT IN SERIOUS INJURY TO THE USER AS WELL AS DAMAGE TO THE MACHINE. IF IN DOUBT, CONTACT A QUALIFIED ELECTRICIAN BEFORE CONNECTING TO THE POWER SOURCE.

THIS TOOL IS FOR INDOOR USE ONLY. DO NOT EXPOSE TO RAIN OR USE IN WET OR DAMP LOCATIONS.

GROUNDING INSTRUCTIONS

In the event of an electrical malfunction or short circuit, grounding reduces the risk of electric shock. The motor of this machine is wired for 115 Volt Single Phase operation ONLY and is equipped with a 3-conductor cord and a 3-prong grounding plug to fit a grounded type receptacle

Do not remove the 3rd prong (grounding pin) to make it fit into an old 2-hole wall socket or extension cord. If an adaptor plug is used it must be attached to the metal screw of the receptacle

The use of an adaptor plug may be illegal in some areas. Check your local codes. If you have any doubts or if the supplied plug does not correspond to your electrical outlet, consult a qualified electrician before proceeding.

CIRCUIT CAPACITY

Make sure that the wires in your circuit are capable of handling the amperage draw from your machine, as well as any other machines that could be operating on the same circuit. If you are unsure, consult a qualified electrician.

If the circuit breaker trips or the fuse blows regularly, your machine may be operating on a circuit that is close to its amperage draw capacity. However, if an unusual amperage draw does not exist and a power failure still occurs, contact a qualified technician or our service department.

EXTENSION CORDS

Oliver Machinery does not recommend the use of an extension cord with your machine. However, if you must use an extension cord, make sure it has an amperage suitable for the rating on the motor ID nameplate. An undersized cord will cause a drop-in line voltage resulting in loss of power and overheating.

Any extension cord used must feature a 3-prong grounding plug as described under grounding instructions. Follow the rules listed.

Oliver Machinery Model 10062.001

Assembly Instructions

- Review the parts breakdown and keep it for reference when putting your drill press together. The assembly steps will reference the item numbers from the parts list.
- Remove all parts from the packaging, but do not dispose of until you are finished.
- Lay out the parts in an unobstructed area, some pieces such as the head will need two people to safely move.
- If you have any questions during assembly, please contact Oliver Machinery at 800-559-5065 or email at info@olivermachinery.net.

Assembling the Drill Press

1. Bolt the **COLUMN PEDESTAL (92A)** and **COLUMN (77)** to the **BASE 95A)** using four **BOLTS (93)** and **WASHERS (94)**.
2. Remove the **RACK COLLAR (75)** from the **COLUMN (77)** by loosening the **SCREW (76)** and carefully sliding the collar preventing any binding. Set the **RACK (78N)** to the side.
3. Locate the **TABLE BRACKET (82)** making sure the **WORM GEAR (79)** and **HELICAL GEAR (80)** are in their proper location.
4. Place the **RACK (78N)** into the table bracket. The tapered end of the rack faces upward, and the squared end faces down.
5. Slide both pieces onto the **COLUMN (77)**. Take care to hold in position as it is a tight fit.
6. Fit the squared end of the rack in the **COLUMN PLATE (99)** of the **RACK SEAT (100)**. Secure the top of the rack by installing the rack collar. Do not bind the rack or over tighten the set screw.
7. Slide the **TABLE CRANK HANDLE (85)** on to the worm gear shaft aligning the set screw with the flat surface and tighten. Use hex wrench supplied.
8. Using two people, lower the **HEAD (38)** on the column and secure in alignment with the base using the two **SET SCREWS (43)**. Use hex wrench supplied.
9. Place the **TABLE (91)** on to the **TABLE ARM (82)** and tighten with **TABLE LOCK HANDLE (88)**.
10. Tighten the three **KNOBS (73)** on to the **FEED HANDLES (74)** and then into the **FEED PINION SHAFT (72)**.
11. Remove the **SCREW (2)** from the **PULLEY COVER (1)** and reverse it through the hole. Tighten **KNOB (3)** on to the screw.
12. Keep the **DRIFT KEY (96)** and hex wrenches for future use.
13. Remove the protective coating from all surfaces using a rag and environmentally safe cleaner. Do not use any chemical that may damage the painted surfaces.

Installing the Drill Chuck Guard

1. Loosen the clamp screw on the **CHUCK GUARD (98)**.
2. Slide the chuck guard onto the shoulder of the **SPINDLE (66)**.
3. Make sure it is equally in place and tighten the clamp screw.

Installing the Drill Chuck

1. Remove the protective coating from the **ARBOR (67)**, **DRILL CHUCK (68)** internal tapered surface, and **SPINDLE (66)** internal tapered surface. It is extremely important these are clean.
2. Place the drill chuck on the short-tapered end of the arbor.
3. Insert the arbor into the spindle and twist until the flat portion mates with the spindle.
4. Adjust the drill chuck so all fingers are recessed into the body.
5. Place a block of wood on the table and using the feed handles, apply pressure to secure the drill chuck in place.
6. To remove the drill chuck, lower the spindle to the full depth, rotate the drill chuck until arbor can be seen, and place the **DRIFT KEY (96)** through the hole. Give a slight tap with a mallet and the drill chuck and arbor will drop out. Be sure to catch the drill chuck to prevent damage. It is much easier to do this with two people.

Drill Press Use Instructions

Drilling Guidelines

- Always wear safety glasses.
- Use clean and sharp drill bits intended for a power drill.
- Clamp the workpiece securely. Never hold it by hand.
- Make sure to use the recommended speed for the drill size and workpiece material.

Adjusting the Table Height

1. Loosen the **CLAMP LEVER (81)**.
2. Rotate the **TABLE CRANK HANDLE (85)** to raise or lower.
3. Tighten the clamp lever at the desired position.

Table Swing Position

1. Loosen the **CLAMP LEVER (81)**.
2. Swing **TABLE (91)** to the desired position.
3. Tighten the **CLAMP LEVER (81)**.
4. Align center hole in table to drill bit position to avoid drilling into the table.
5. For large pieces the **BASE (95A)** can be used as the table.

Changing Speeds

1. Always disconnect the drill press from the power source before changing speeds.
2. Raise the **PULLEY COVER (1)**.
3. Refer to the speed chart for the desired speed and belt arrangement.
4. Loosen the **THUMB SCREWS (39)** on each side of the head and release the belt tension.
5. Relocate the belts to the desired speed arrangement.
6. Push the **MOTOR (53)** away from the head using the **LEVER SHAFT (42)** to tension the belts.
7. Tighten the thumb screws to hold the belt tension.
8. Proper tension is less than ½" deflection when squeezing the belt together.

Table Rotation Position

1. Loosen the **TABLE LOCK HANDLE (88)**.
2. Rotate **TABLE (91)** to the desired position.
3. Tighten the table lock handle.

Table Tilt Adjustment

1. Loosen **BOLT (90)**.
2. Remove **SET SCREW (87)**.
3. Tilt the table to the desired position.
4. Tight the bolt, do not replace the set screw.
5. When moving back to the normal drilling position, replace the set screw and tighten.


Depth Stop Adjustment

1. Set the bottom **DEPTH STOP LOCK NUT (34)** to the desired depth setting.
2. Tighten the second lock nut against the first nut to secure it in position.

Laser Adjustment

1. Using a small bit (1/16" or less) drill a hole in a scrap piece of wood the same thickness as your workpiece.
2. Turn on the laser and move the light so both cross hairs intersect the hole.
3. The laser is now adjusted for operation.
4. If you change the table height or thickness of your workpiece, start with step 1 and adjust for your next set of holes.

10062.001

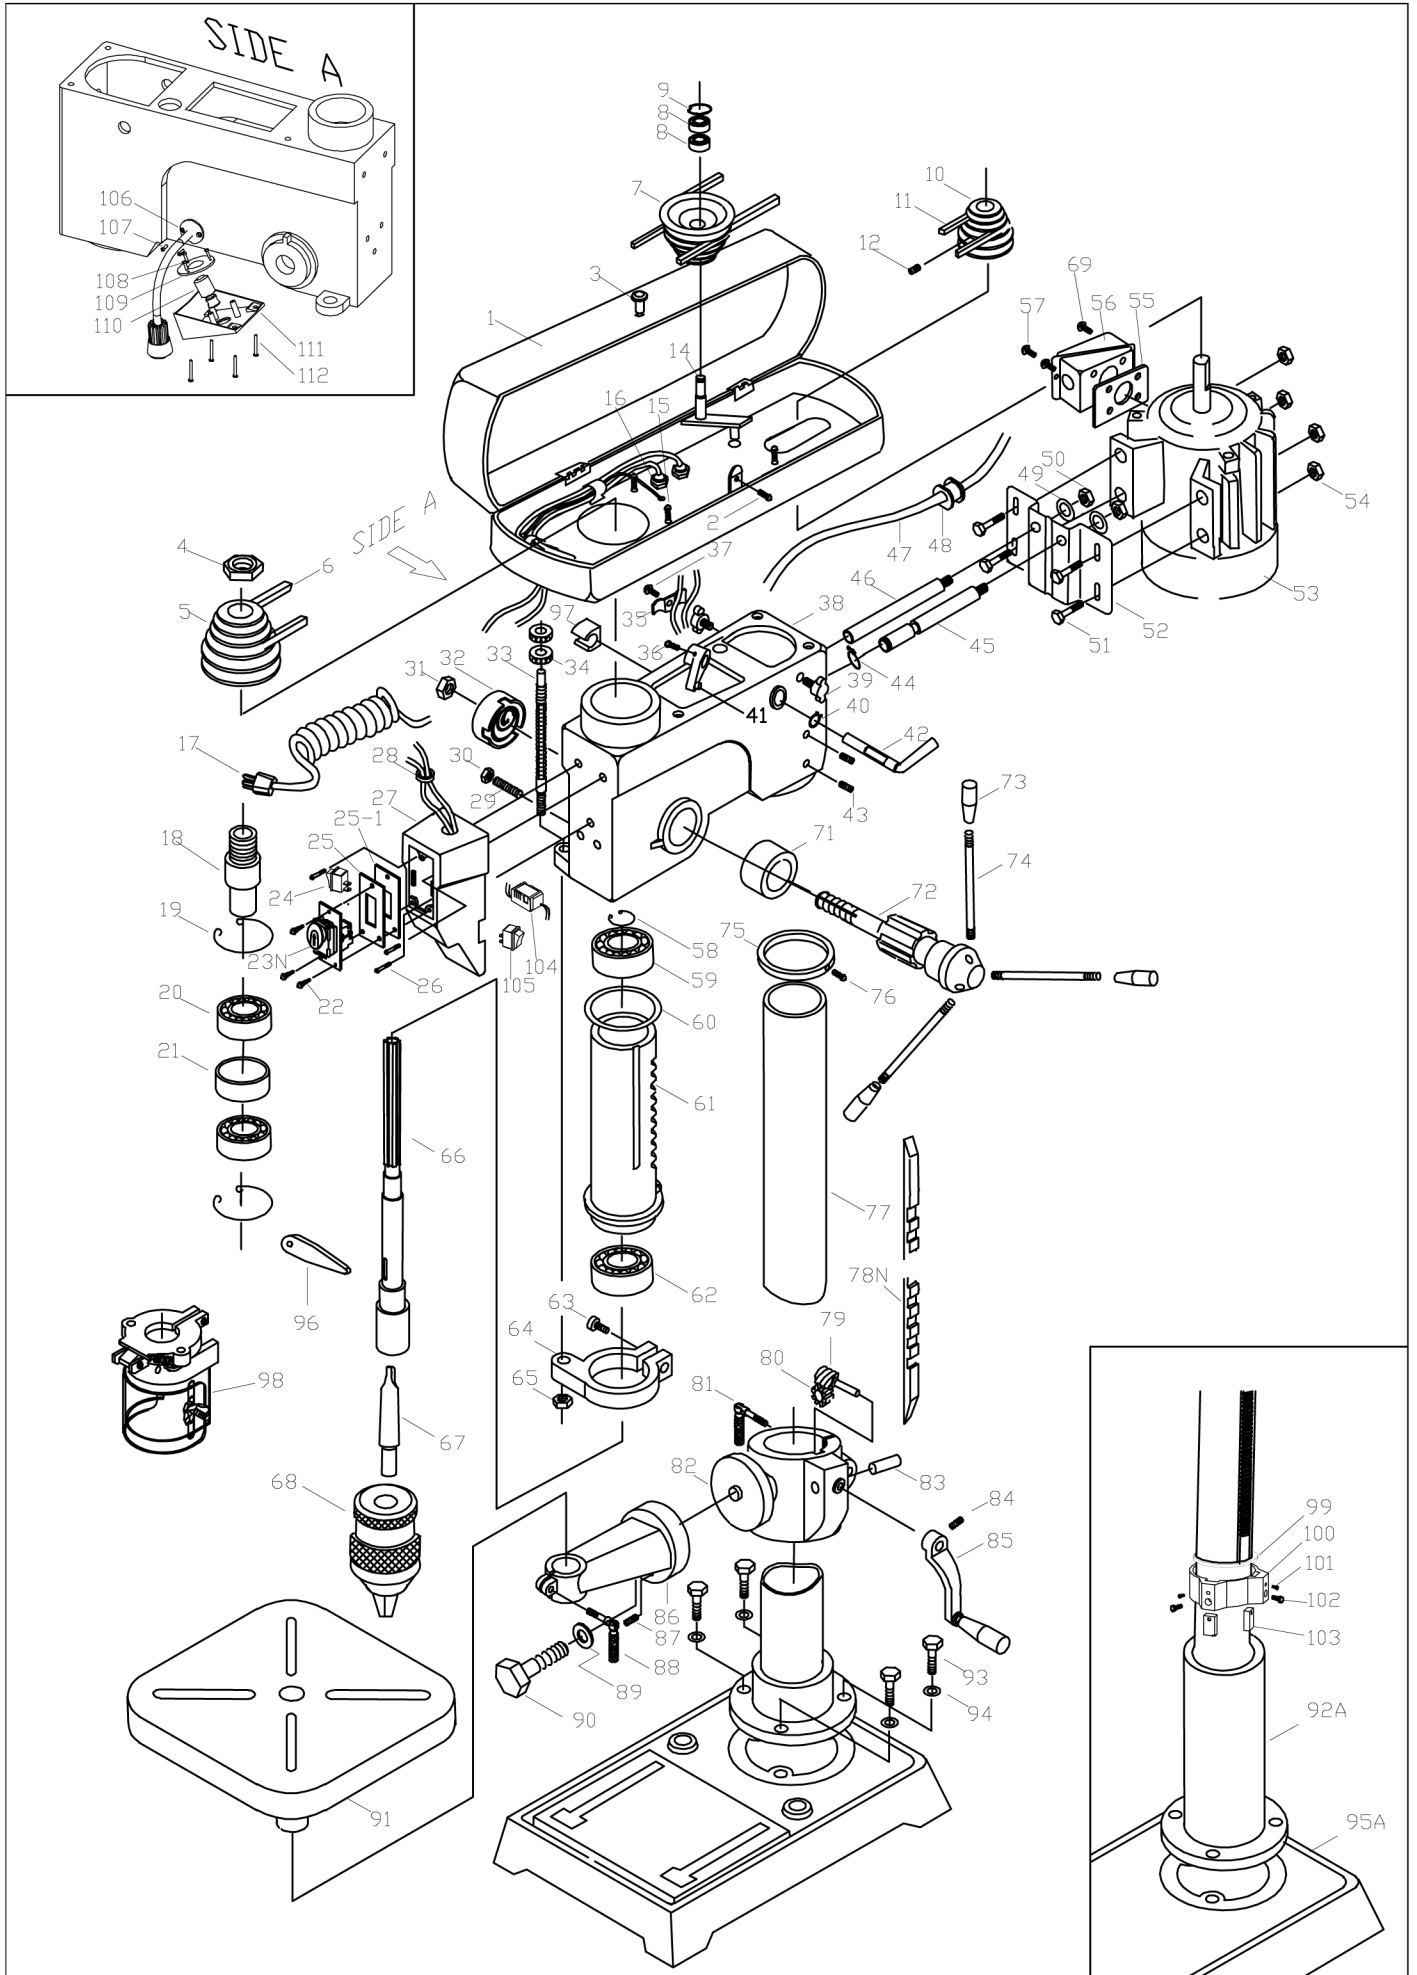

PART LIST FOR 10062.001

NO.	PART NO.	DESCRIPTION	QTY
1	10062-1	PULLEY COVER	1
2	10062-2	PAN HEAD SCREW	1
3	10062-3	KNOB	1
4	10062-4	SPINDLE PULLEY NUT	1
5	10062-5	SPINDLE PULLEY	1
6	10062-6	M-26 V-BELT	1
7	10062-7	IDLER PULLEY	1
8	BB-6202ZZ	6202ZZ BALL BEARING	2
9	10062-9	RETAINING RING	1
10	10062-10	MOTOR PULLEY	1
11	10062-11	M-29 V-BELT	1
12	10062-12	SET SCREW	1
14	10062-14	PULLEY SUPPORT PLATE	1
15	10062-15	SCREW	4
16	10062-16	GROMMET	2
17	10062-17	POWER CORD w/MOLDED PLUG	1
18	10062-18	PULLEY INSERT	1
19	10062-19	RETAINING RING	2
20	BB-6205ZZ	6205ZZ BALL BEARING	2
21	10062-21	BEARING SPACER	1
22	10062-22	PAN HEAD SCREW	3
23N	10062-23N	ON/OFF SWITCH ASSEMBLY	1
24	10062-24	LIGHT SWITCH	1
25	10062-25	SWITCH PLATE	1
25-1	10062-25-1	WASHER PAD	1
26	10062-26	PAN HEAD SCREW	3
27	10062-27	SWITCH BOX	1
28	10062-28	CORD CLAMP	1
29	10062-29	SCREW	1
30	10062-30	HEX NUT	1
31	10062-31	HEX NUT	1
32	10062-32	TENSION SPRING ASS'Y	1
33	10062-33	DEPTH STOP ROD	1
34	10062-34	DEPTH STOP LOCK NUT	2
35	10062-35	CORD CLAMP	1
36	10062-36	LOCK PIN	1
37	10062-37	SCREW	1
38	10062-38	HEAD CASTING	1
39	10062-39	THUMB SCREW	1
40	10062-40	RETAINING RING	1
41	10062-41	ADJUSTMENT LEVER	1
42	10062-42	LEVER SHAFT ASS'Y	1

PART LIST FOR 10062.001

NO.	PART NO.	DESCRIPTION	QTY
43	10062-43	SET SCREW	2
44	10062-44	RETAINING RING	1
45	10062-45	RH MOTOR SUPPORT BRACKET	1
46	10062-46	LH MOTOR SUPPORT BRACKET	1
47	10062-47	MOTOR TO SWITCH CORD	1
48	10062-48	STRAIN RELIEF	1
49	10062-49	SPRING WASHER	2
50	10062-50	NUT	2
51	10062-51	HEX HEAD SCREW	4
52	10062-52	MOTOR BRACKET	1
53	10062-53	MOTOR	1
53-1	10062-53-1	CAPACITOR(NOT SHOWN)	1
53-2	10062-53-2	CAPACITOR COVER(NOT SHOWN)	1
54	10062-54	NUT	4
55	10062-55	RUBBER GASKET	1
56	10062-56	MOTOR JUNCTION BOX	1
57	10062-57	SCREW	1
58	10062-58	RETAINING RING	1
59	BB-6202ZZ	6202ZZ BALL BEARING	1
60	10062-60	RUBBER WASHER	1
61	10062-61	QUILL	1
62	BB-6205ZZ	6205ZZ BALL BEARING	1
63	10062-63	SCREW	1
64	10062-64	DEPTH STOP BRACKET	1
65	10062-65	LOCK NUT	1
66	10062-66	SPINDLE	1
67	10062-67	ARBOR MT-2/JT-3	1
68	10062-68	5/8" CHUCK w/KEY JT-3	1
68-1	10062-68-1	CHUCK KEY ONLY (not shown)	1
69	10062-69	SCREW	2
71	10062-71	SPACER	1
72	10062-72	FEED PINION	1
73	10062-73	KNOB	3
74	10062-74	HANDLE	3
75	10062-75	RACK COLLAR	1
76	10062-76	SET SCREW	1
77	10062-77	COLUMN	1
78N	10062-78N	RACK	1
79	10062-79	ELEVATING WORM	1
80	10062-80	RACK GEAR	1
81	10062-81	CLAMP LEVER	1
82	10062-82	TABLE ARM BRACKET w/scale	1

PART LIST FOR 10062.001

NO.	PART NO.	DESCRIPTION	QTY
82-1	10062-82-1	TILT SCALE ONLY w/rivets	1
83	10062-83	GEAR SHAFT	1
84	10062-84	SET SCREW	1
85	10062-85	TABLE CRANK HANDLE	1
86	10062-86	TABLE ARM	1
87	10062-87	SET SCREW	1
88	10062-88	TABLE LOCK HANDLE	1
89	10062-89	WASHER	1
90	10062-90	BOLT	1
91	10062-91	TABLE	1
92A	10062-92A	COLUMN PEDESTAL	1
93	10062-93	BOLT	4
94	10062-94	SPRING WASHER	4
95A	10062-95A	BASE	1
96	10062-96	DRIFT KEY	1
97	10062-97	KEY HOLDER	1
98	10062-98	CHUCK GUARD ASSEMBLY	1
99	10062-99	COLUMN PLATE	1
100	10062-100	RACK SEAT	1
101	10062-101	HEX HEAD BOLT M4	2
102	10062-102	HEX HEAD BOLT M10	2
103	10062-103	STOP BLOCK	1
104	10062-104	LASER TRANSFORMER	1
105	10062-105	LASER SWITCH	1
106	10062-106	LED LIGHT	1
107	10062-107	SCREW	2
108	10062-108	SCREW	3
109	10062-109	LASER COVER	1
110	10062-110	KNOB	1
111	10062-111	LASER BOX	1
112	10062-112	SCREW	4